# Installation Guide

## MB3A TWO PANEL CURVED COLOUR BATHSCREEN

IMPORTANT
Please read the complete instructions
before commencing fitting.

Do Not attempt to install the product unless you can tick all 4 boxes satisfactorily

- Check that you have the tools required. ☐
- Check the installation site is compatible with the sizes of door supplied ☐
- Check all the enclosure components are present ☐
- Check the installation kit is complete ☐

The wall plugs supplied with the installation kit are for use in solid walls. Hollow or 'stud partition' walls will require alternative fixings.Please consult a hardware supplier for the correct type. It may also be necessary to consult your tiling supplier about the correct method for drilling your tiles

ATTENTION:TAKE EXTREME CARE WHEN HANDLING GLASS.
WEAR PROTECTIVE EYEWEAR AND CLOTHING.
DO NOT LEAVE THE GLASS ON HARD SURFACES AND AVOID CONTACT BETWEEN THE GLASS EDGES AND HARD SURFACES OR IMPACTS DURING THE INSTALLATION

NOTE: Please ensure the bathscreen Is installed on the inside of the bath top.

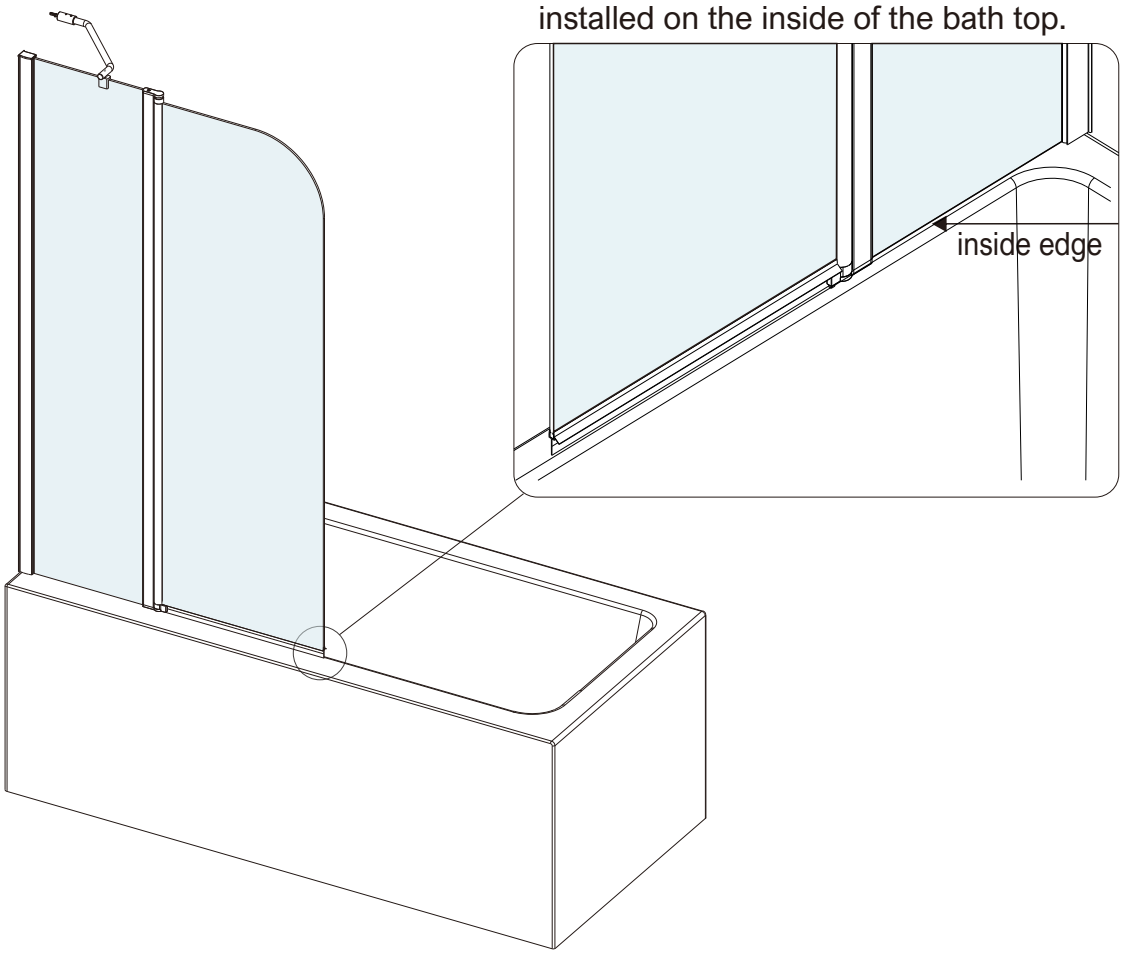

# COMPONENTS AND BOX CONTENTS

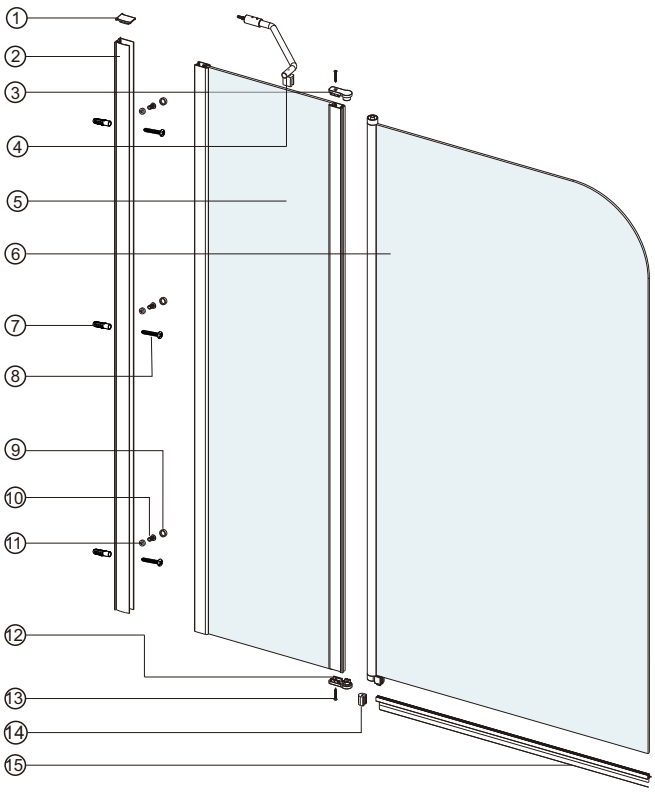


| NO. | Qty | PART DESCRIPTION | MATT BLACK | BRUSHED BRASS | BRUSHED NICKEL | BRUSHED GUN METAL |
|---|---|---|---|---|---|---|
| 1 | 2 | Wall Profile Cover Cap | SP0MOBY002B-L/R | M7044BBRL/R | M7044BNL/R | M7044BGML/R |
| 2 | 1 | Wall Profile | SP0LR8387CB | M7045BBR | M7045BN | M7045BGM |
| 3 | 1 | Top Leakfree Bracket | M7036MB | M7036BBR | M7036BN | M7036BGM |
| 4 | 1 | Stabilising Bar | SP0BSYS023CMB | M7042BBR | M7042BN | M7042BGM |
| 5 | 1 | Fixed Glass Panel | B | B | B | B |
| 6 | 1 | Glass Moving Panel | A | A | A | A |
| 7 | 3 | Wall Plug | 2SP12 | 2SP12 | 2SP12 | 2SP12 |
| 8 | 3 | Screw (4x40mm) | A2403001 | A2403001 | A2403001 | A2403001 |
| 9 | 3 | Screw Cover Cap | SP02SS008MB | SP02SS008BBR | SP02SS008BN | SP02SS008BGM |
| 10 | 3 | Screw (4x12mm) | A2401201 | A2401201 | A2401201 | A2401201 |
| 11 | 3 | Screw Cover Cap Clip | SP02SS009MB | SP02SS009 | SP02SS009 | SP02SS009MB |
| 12 | 1 | Bottom Leakfree Bracket | M7037MB | M7037BBR | M7037BN | M7037BGM |
| 13 | 2 | Screw (3.5x30mm) | SP0M7029 | SP0M7029 | SP0M7029 | SP0M7029 |
| 14 | 1 | Leakfree Foam Insert | SP0LP-123MB | SP0LP-123W | SP0LP-123W | SP0LP-123MB |
| 15 | 1 | Clear Bottom Seal | SP0LFCS | SP0LFCS | SP0LFCS | SP0LFCS |

## Fixing Kit components

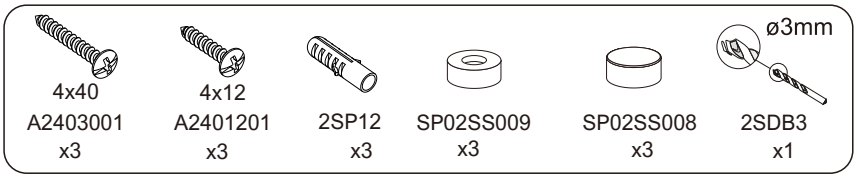


4x40 A2403001 x3 | 4x12 A2401201 x3 | 2SP12 x3 | SP02SS009 x3 | SP02SS008 x3 | 2SDB3 x1

M7044 x2 | SP0LP-123W x1

* Matt Black

SP0MOBY002L/R x2 | SP0LP-123MB x1

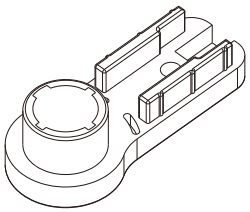

Top Leakfree Bracket
M7036
x1

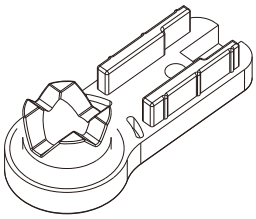

Bottom Leakfree Bracket
M7037
x1

## Tools required

-6mm Masonry drill bit
-Power drill
-Neutral cure anti bacterial silicone
-Pencil
-Tape measure
-PH2 Philips Head screw driver
-Spirit level with horizontal and vertical level indicators

## IMPORTANT - Installation Site

1. Ensure your bath is level before fitting. This screen is not designed to fit on baths with stepped fronts, roll top rims or integral soap dishes.

2. The tiling or other wall finishing should be effectively sealed at the bath edges.

# INSTALLATION

1. Silicone on the bath edge if not siliconed previously fig 1.

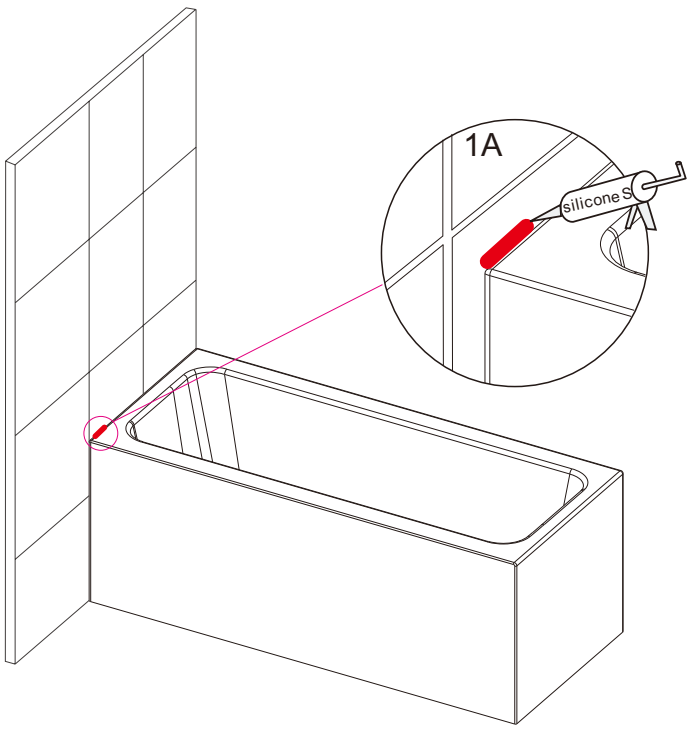


FIG 1

2. Insert the fixed panel B into the wall profile. Do not fix to the wall profile fig 2.

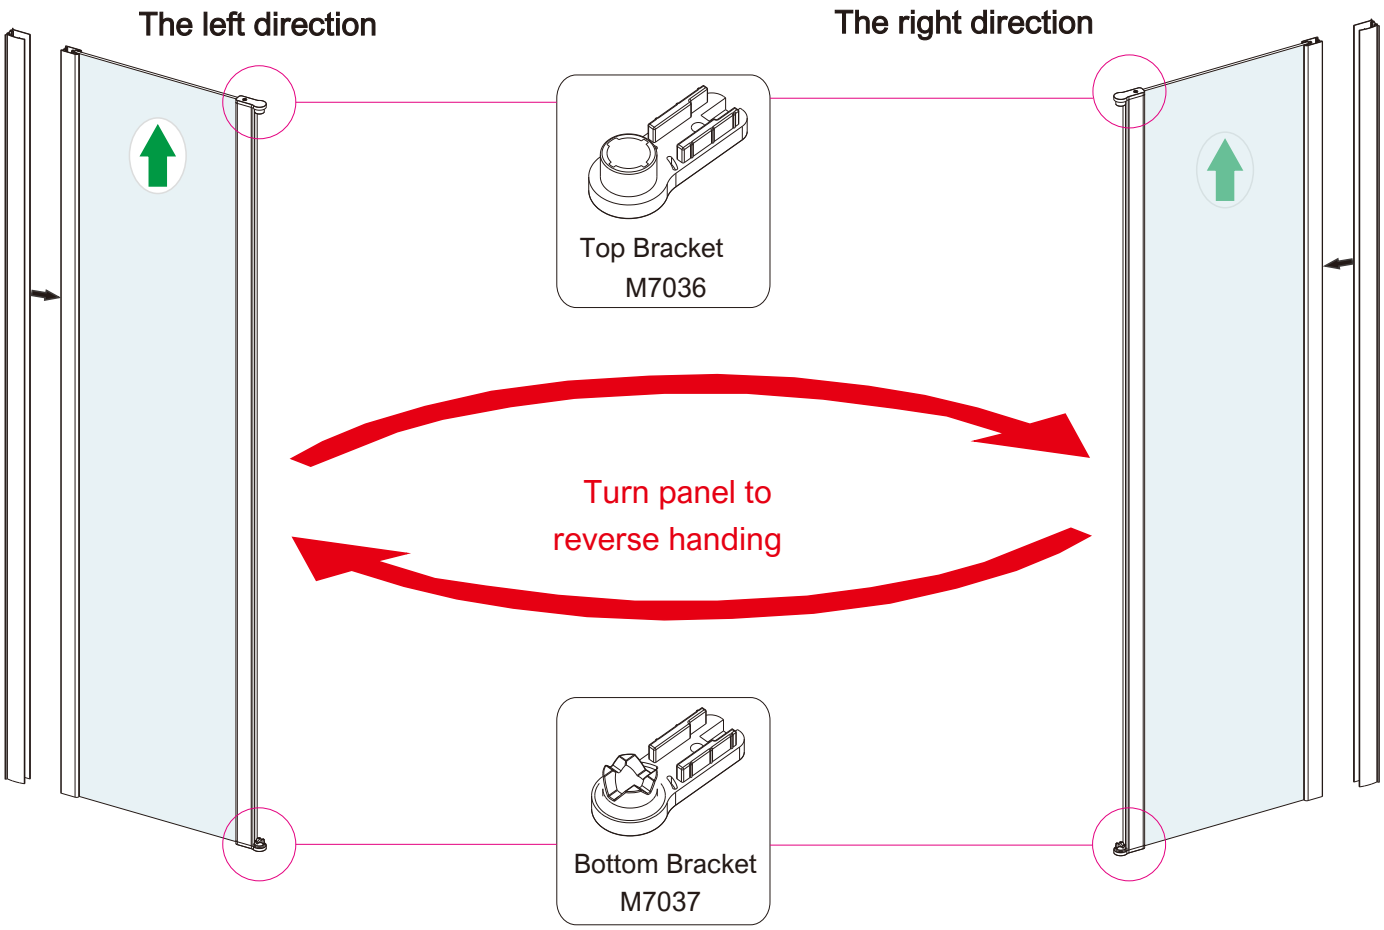


FIG 2

3A. Apply silicone as shown in fig 3A to the bottom of the clear seal
3B. Fit the seal onto the bottom of the bath screen making sure the angle fin is positioned to the inside as per 3E
3C. Trim the seal to the end of the glass panel as shown on 3D

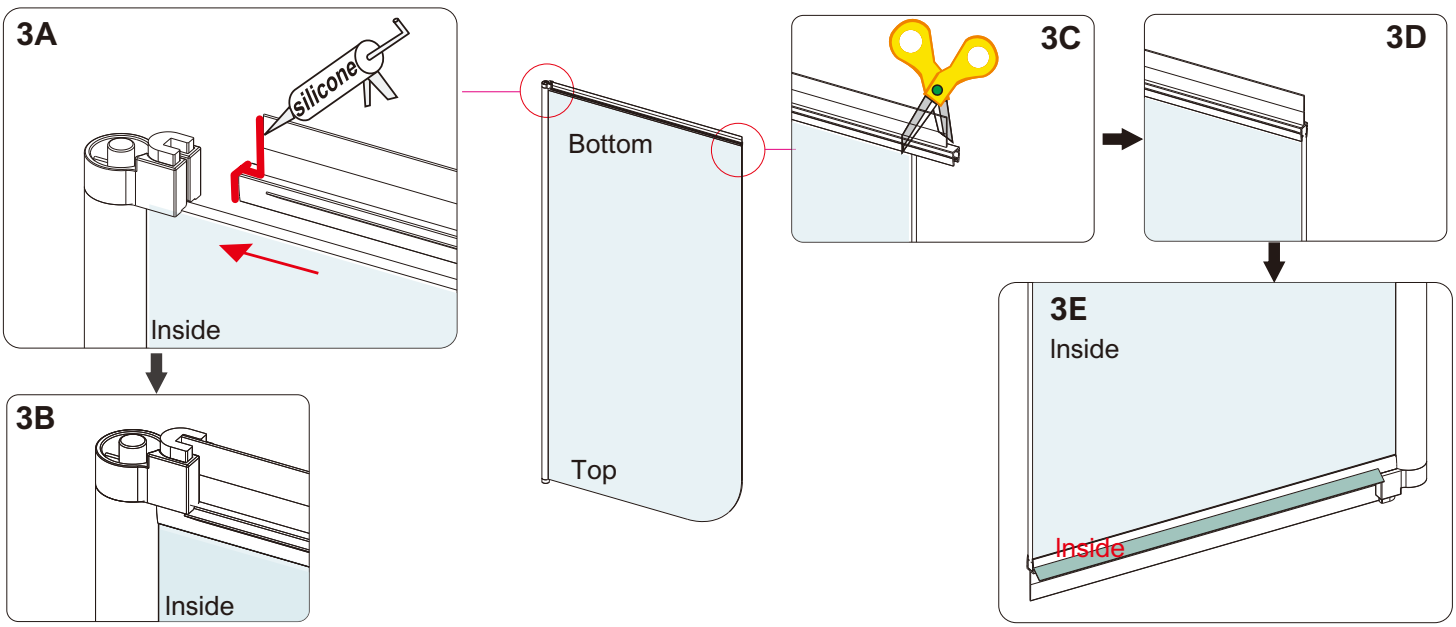


FIG 3

4. Position the wall profile so the seal on the moving panel sits on the inside edge of the bath. Fig 4.

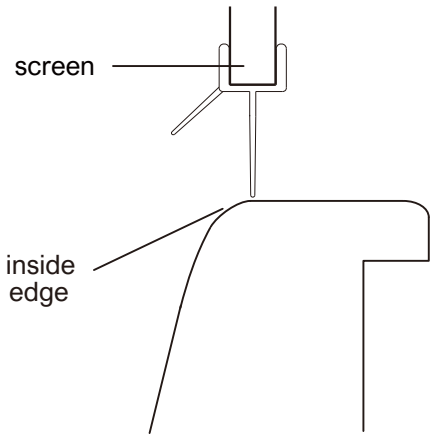


FIG 4

5A. Plumb the wall profile using the vertical element of the spirit level
5B. Mark 3 holes
5C. Drill with 6mm masonry bit
5D. Fit the wall plugs
Fig 5. Using the 3 screws A2403001, fit the wall profile to the wall

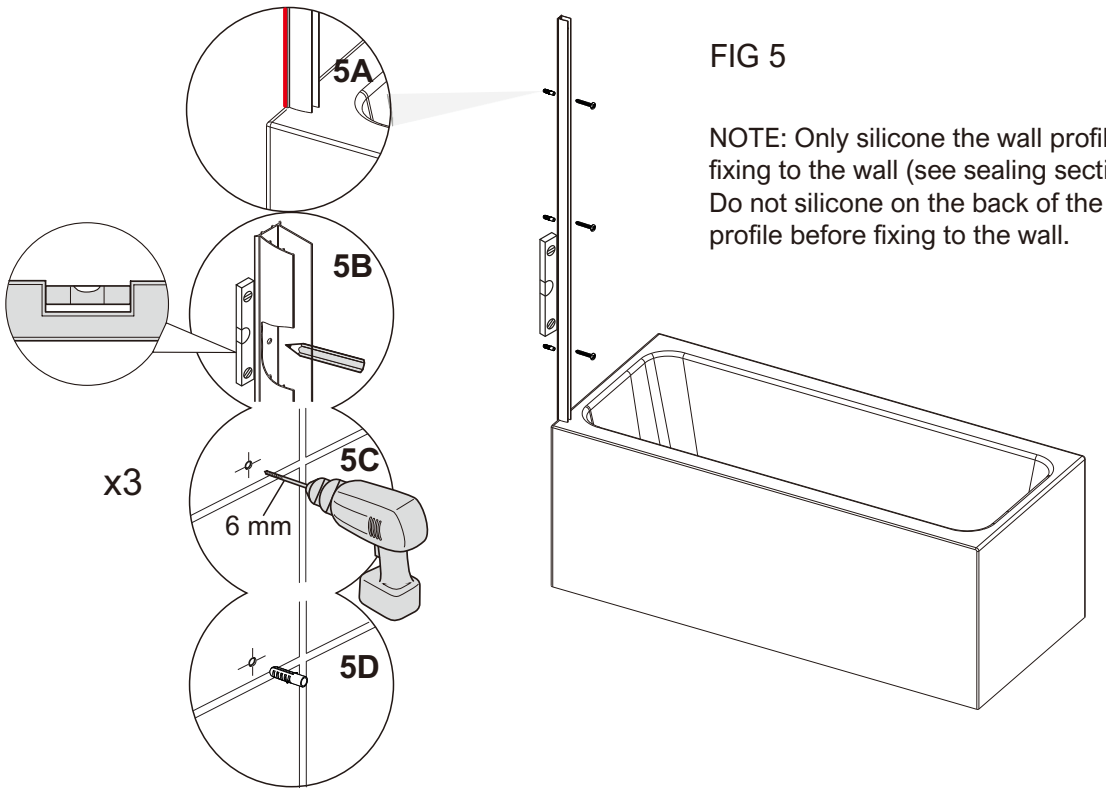


FIG 5

NOTE: Only silicone the wall profile after fixing to the wall (see sealing section). Do not silicone on the back of the wall profile before fixing to the wall.

6A. Fit the fixed panel into the wall profile.
6B. On the inside of the bath screen drill 3 holes, top, middle and bottom, through the wall profile and fixed panel using a 3mm steel drill bit.
6C. Using the screw cover cap clip and screws A2401201 fix the wall profile to the fixed panel and fit the screw cover caps.

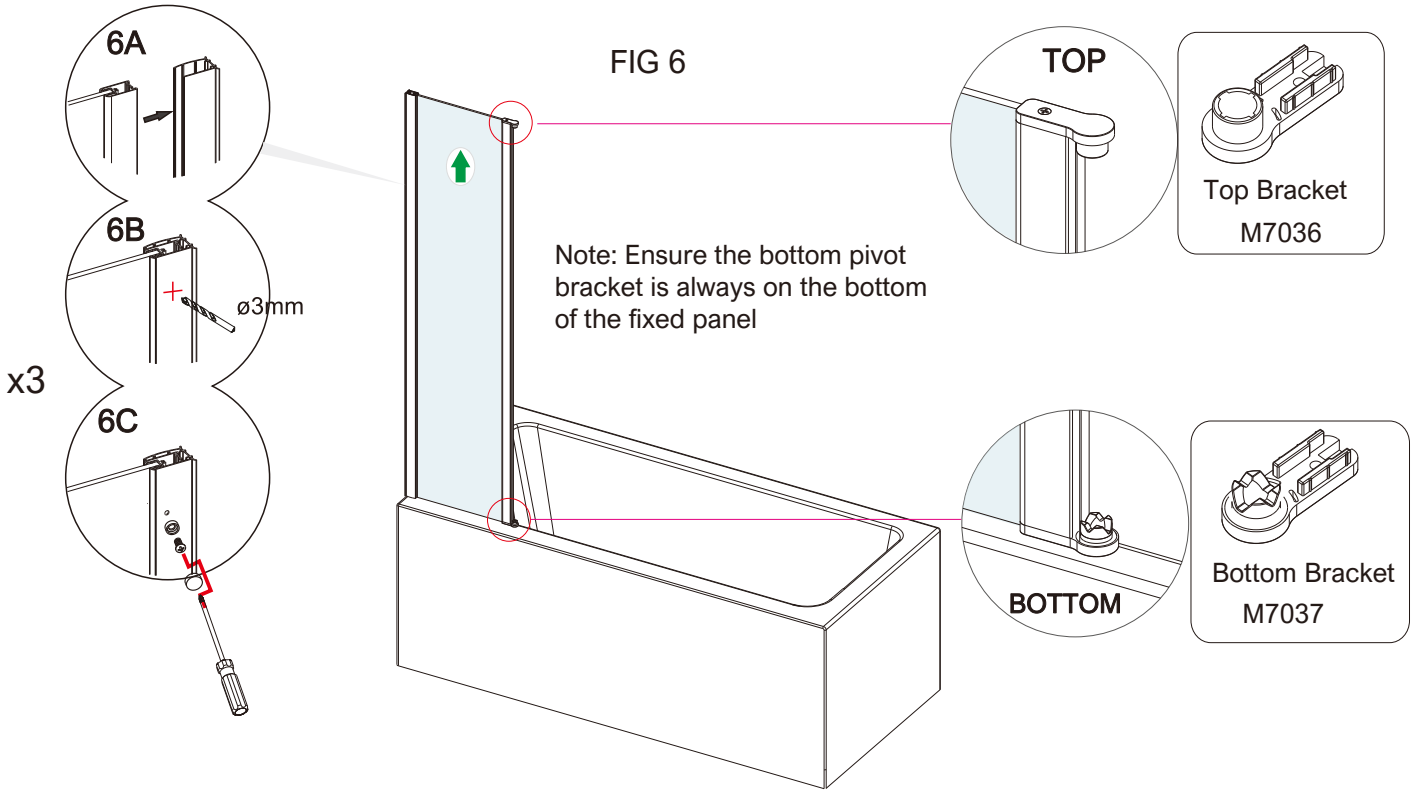


7A. To change the handing of the stabilising bar unscrew where the arm attaches to the glass clamp and reverse.
7B. Place the stabilising bar onto the fixed panel.
7C. Mark the fixing point for the bracket to the wall.
7D. Drill with 6mm masonry bit
7E. Fit the wall plug
7F. Fix the wall bracket to the wall with screw A240300.
7G. Fasten the bracket to the glass keeping the washer on the outside of the glass, then attached the cover caps to the bracket

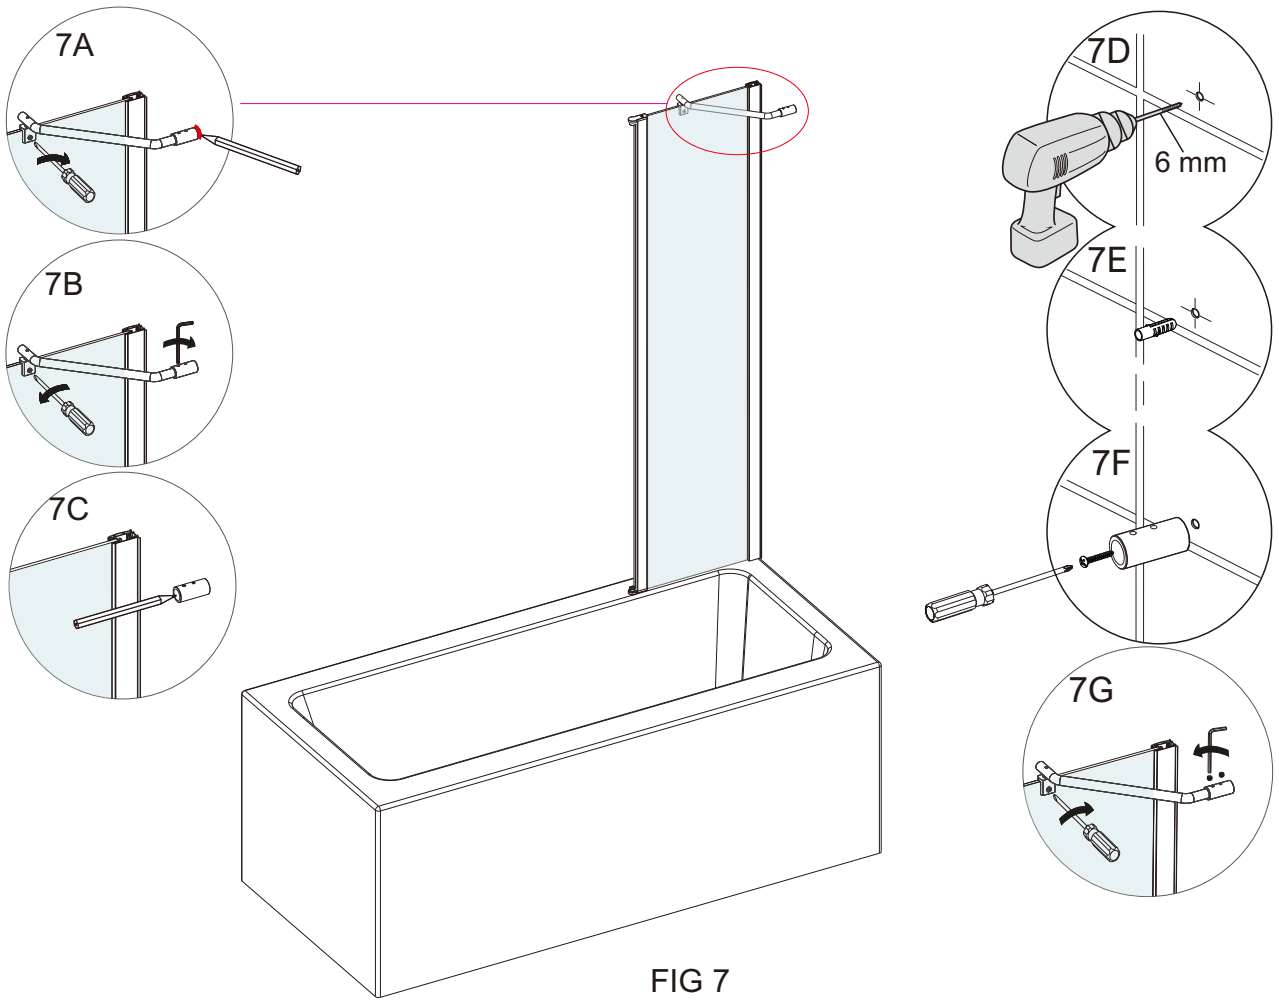


FIG 7

8A. Loosen the top bracket.
8B. Pull up the inside brush seal by 20mm, this can then be cut flush with the top of the profile.
8C.This will leave 20mm below the inside brush seal to allow any water build-up to pass back into the bath.
8D. Install the moving panel into the bottom leak free bracket.
8E. Fix the top bracket in place with the fixing screw provided.
9A. Fit the wall profile cover cap.

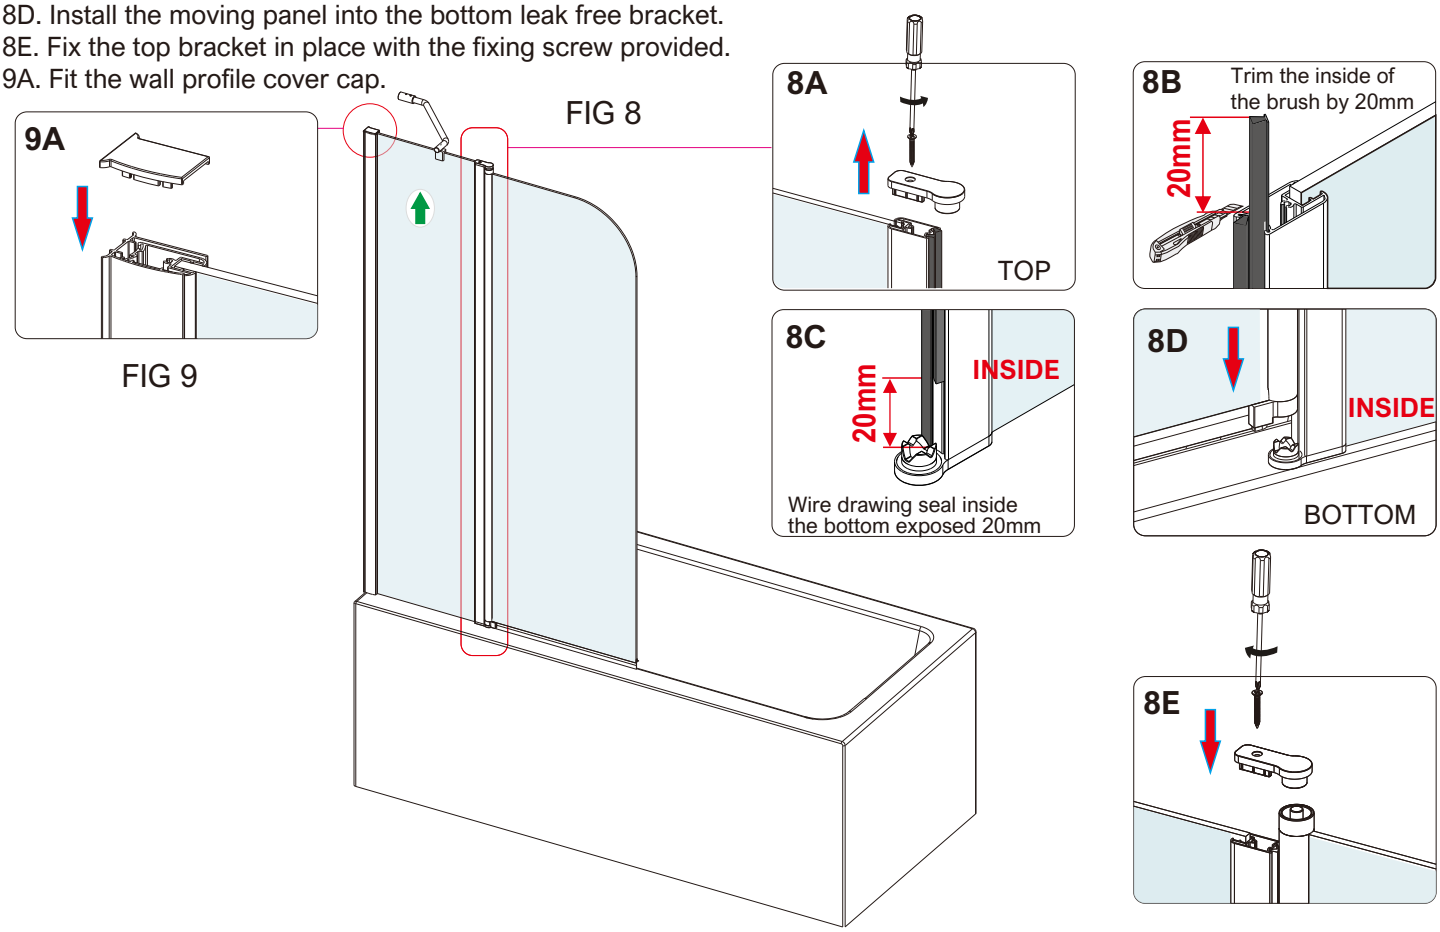


Sealing. Fig 10 - seal with silicone according to the position of the outer thick lines

**Inside and outside:** When installation is complete seal the joint between the wall profile and the wall top to bottom on the inside and outside. Silicone where the fixed panel and the hinge bracket sit on the bath inside and outside.
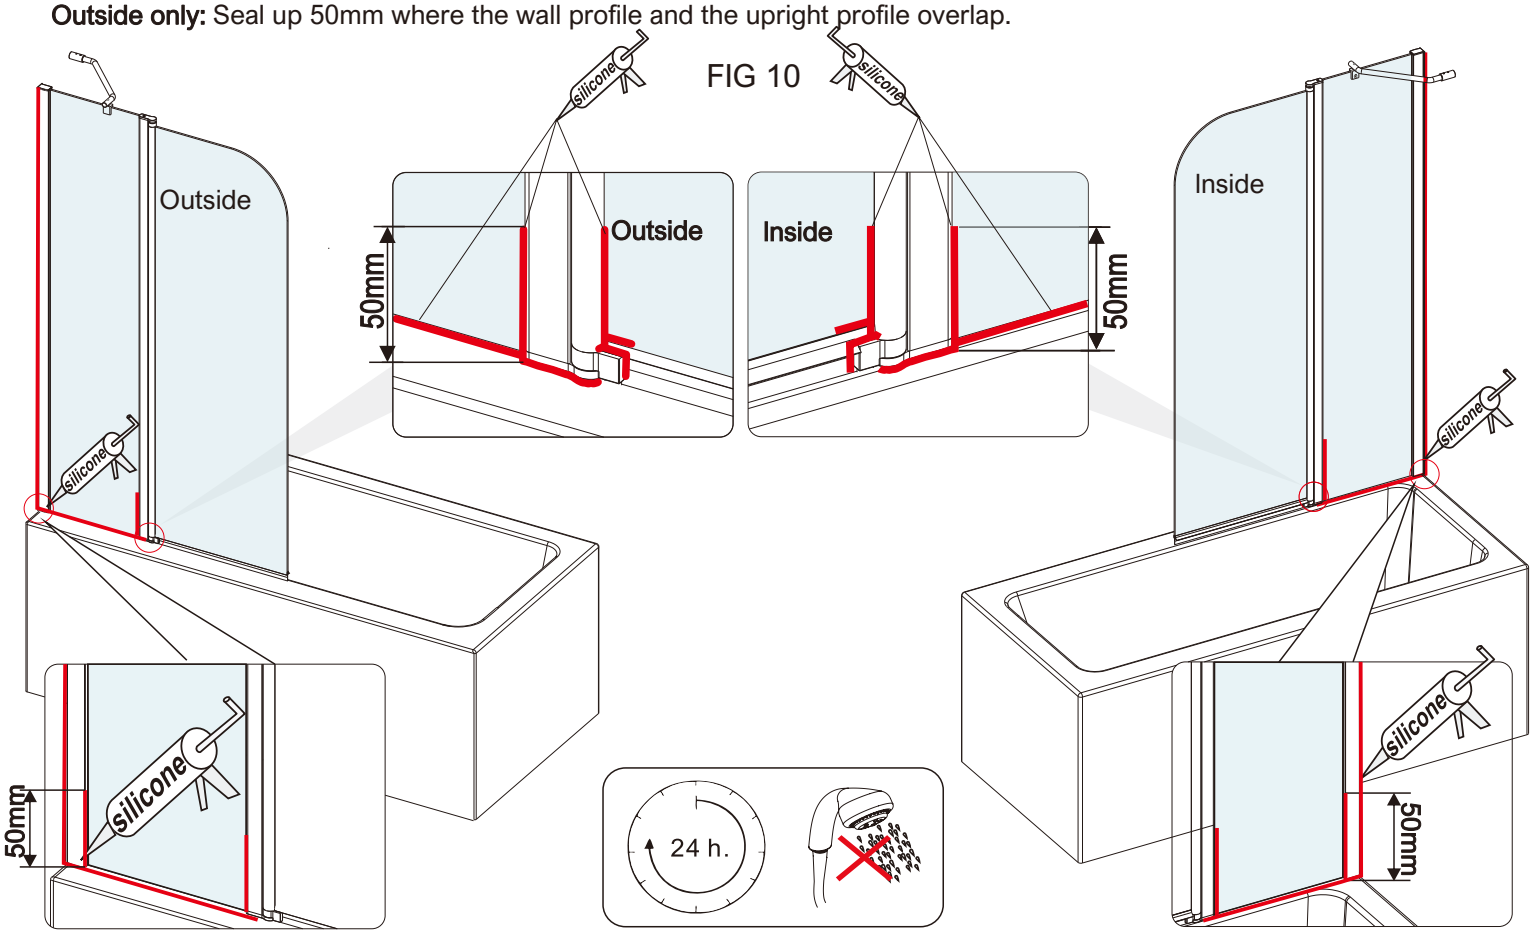
**Outside only:** Seal up 50mm where the wall profile and the upright profile overlap.